



Assembly Instructions


Recessed Base



	Description	Qty
A	Base panels	4
B	Brackets	2

PARTS LIST

Figure 1

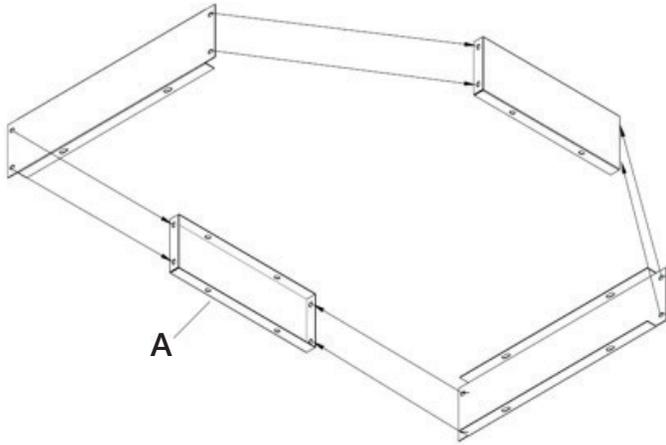

1. Begin by bolting together all four base panels (A). Using 8 nuts and bolts, with the nuts on the inside of the base (*Figure 1*). Tighten bolts with a 3/8" nut driver.

2. Bolt both brackets (B) to the bottom of the locker using 2 nuts and bolts per bracket (Fig.2)

3. Attach assembled base to the bottom of the locker, using 2 nuts and bolts on each bracket and 2 nuts and bolts on the bottom of the locker door frame (*Figure 3*).

Figure 2

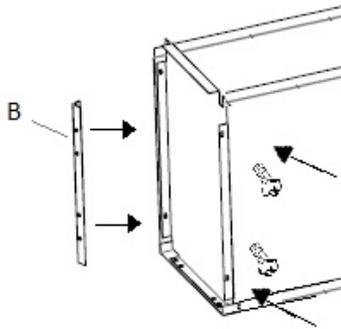


Figure 3

