




Assembly Instructions

Slope Top



	Description	Qty
A	Side Panels	2
B	Top Panel	1
C	Threaded Screws	4

Figure 1

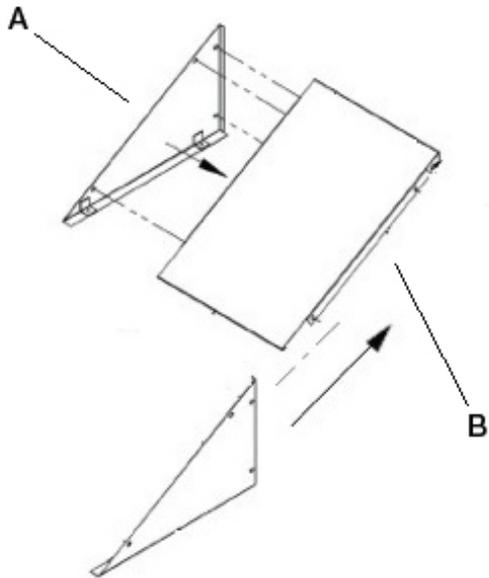


PARTS LIST

1. Begin by sliding side panels into slots of the top panel (B), until firmly set in place and positioned flush against the top panel flange (*Figure 1*).

2. Bolt both side panels to top panel. Using 4 nuts and bolts, with the nuts on the inside of the top. Tighten each nut with a 3/8" nut driver.

3. Attach the assembled slope top to the top of the locker. Using 4 threaded screws (C) (included) and a Phillips screwdriver. Screws must be inserted upside down, from the inside of the locker, passing through the top panel of the locker and the welded flange of the slope top with the use of washers (*Figure 2*).

Figure 2

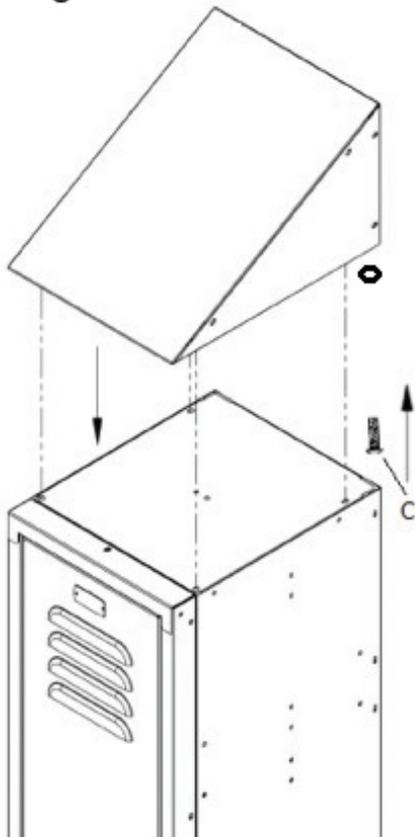

*If assembling more than one slope top for banks of multiple lockers, they can be installed individually for each locker; or can share inner side panels and be bolted together by the top two holes on the side panels.